

# Magicforce 68-key Keyboard User Guide

## DIP SWITCHES

DIP Switch	Function	Function when off	Function when on
Switch 1	Swap Caps Lock and Left Control	<b>Button's function normally.</b> Caps is Caps, left Ctrl is left Ctrl	<b>Buttons functions switched.</b> Caps Lock = Left Ctrl, Left Ctrl = Caps Lock
Switch 2	Swap Win Key and Fn	<b>Keys function normally,</b> Win is Win, Fn is Fn	<b>Key Functions switched,</b> Win is Fn, Fn is Win.
Switch 3	Lock Win Key	Win Key <b>unlocked</b> , pressing it opens start menu	Win Key <b>locked</b> , will not do anything.

## ESCAPE KEY FUNCTIONS

Note that the combination FN+Q will switch the functions slightly. It is noted in the table below.

Key Combination	Normal Result	After Fn+Q
Just ESC	ESC	`
Shift+ESC	~	~
Fn+ESC	`	ESC

# Magicforce 68-key Keyboard User Guide

## FN LAYER

Key Combination	Function	Key Combination	Function
Fn+W	Polling rate 20C/S	Fn+;	Home
Fn+E	Polling rate: 40C/S	Fn+/ 	End
Fn+R	Polling Rate 60C/S	Fn+Page Up	Home
Fn+1 to =	F1 - F12	Fn+Page Down	End
Fn+Z	Launch default media app	Fn+O	Print Screen/SysReq
Fn+X	Play/Pause	Fn+P	Scroll Lock
Fn+C	Stop	Fn+[	Pause Break
Fn+V	Previous Song	Fn+]	Calculator
Fn+B	Next Song	Fn+Up arrow	Increase LED Brightness
Fn+N	Volume Down	Fn+Down arrow	Lower LED brightness, keep pressing to turn them off
Fn+M	Volume Up	Fn+Left Arrow	On/Off LED Breathing Mode
Fb+<	Mute	Fn+Right arrow	LED Breathing mode speed